64bit Driver Installation Guide
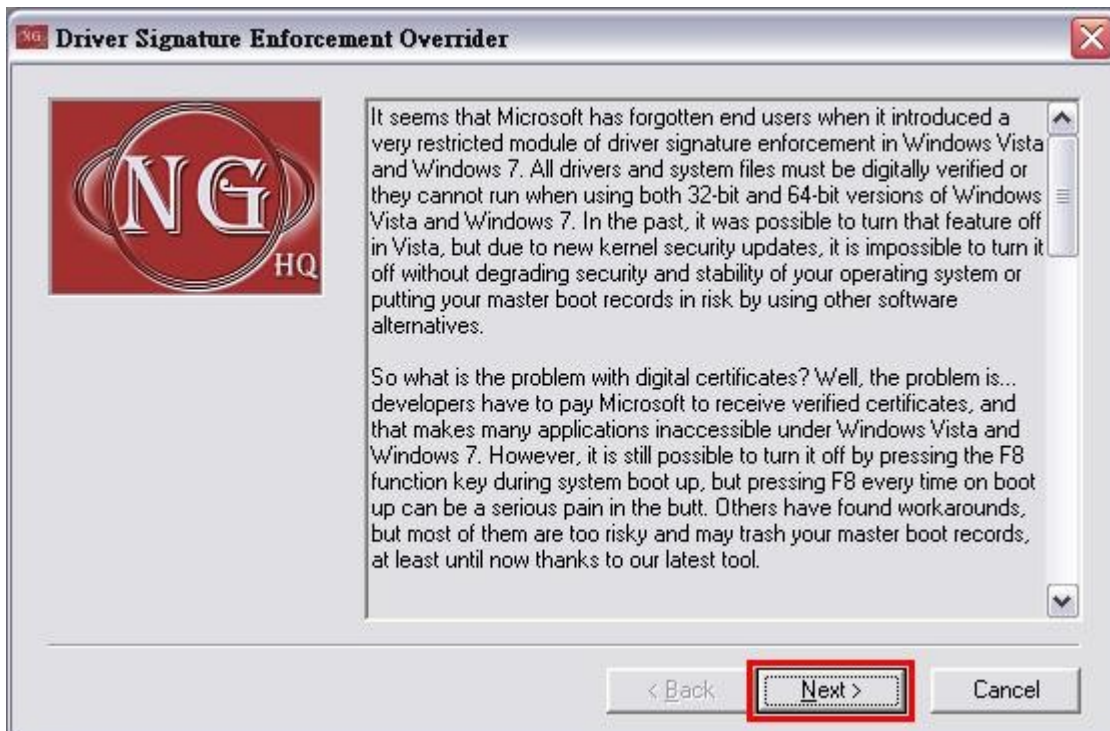
1. Visit http://www.ngohq.com/home.php?page=dseo to download this program.
   ** In case the above link is dead, please simply search "Driver Signature Enforcement Overrider" by Google. **
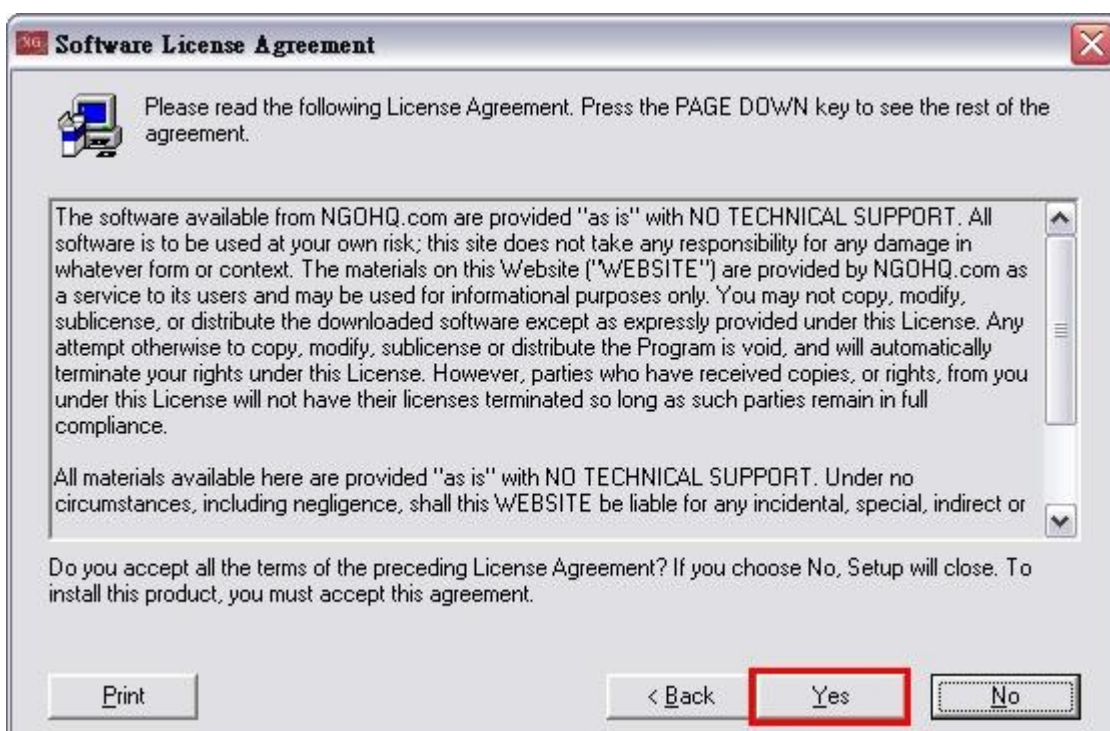
2. Double click [NG dseo13b.exe] to run the program.

   ** Note: User Account Control (UAC) must be disabled in-order to use this tool.**
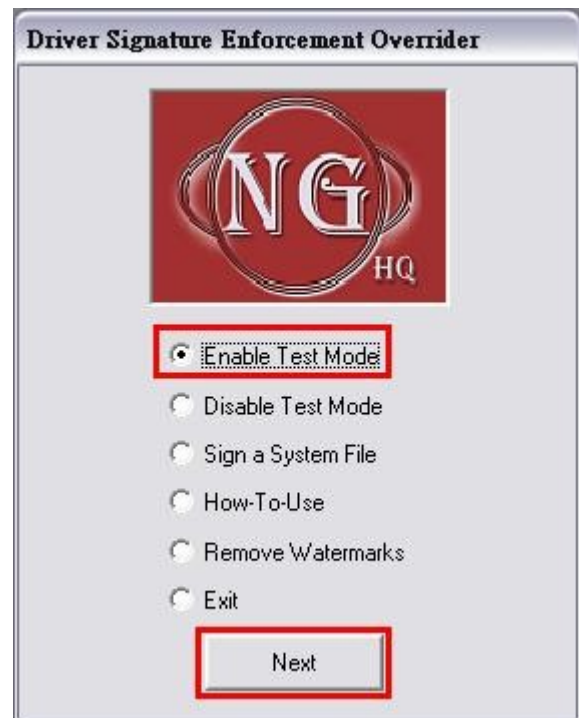
3. Click "Next".

4. Click "yes".
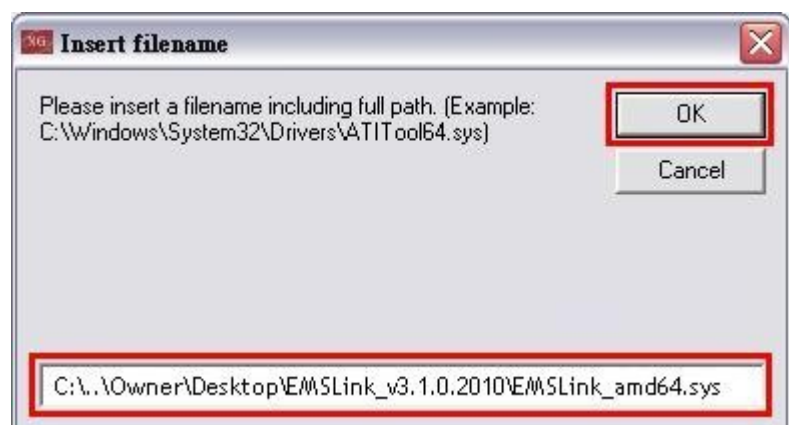
5. Select "Enable Test Mode", and click "Next".

Driver Signature Enforcement Overrider

- ● Enable Test Mode
- ○ Disable Test Mode
- ○ Sign a System File
- ○ How-To-Use
- ○ Remove Watermarks
- ○ Exit

Next

6. Select "Sign a System File", and click "Next".

Driver Signature Enforcement Overrider

- ○ Enable Test Mode
- ○ Disable Test Mode
- ● Sign a System File
- ○ How-To-Use
- ○ Remove Watermarks
- ○ Exit
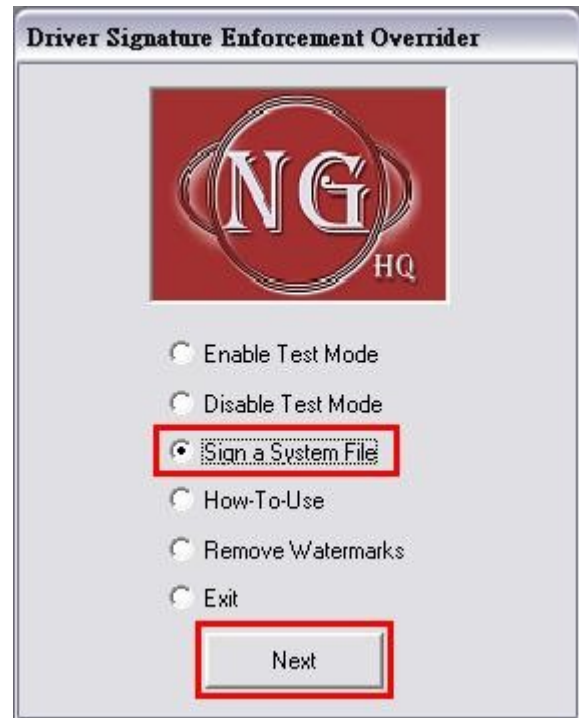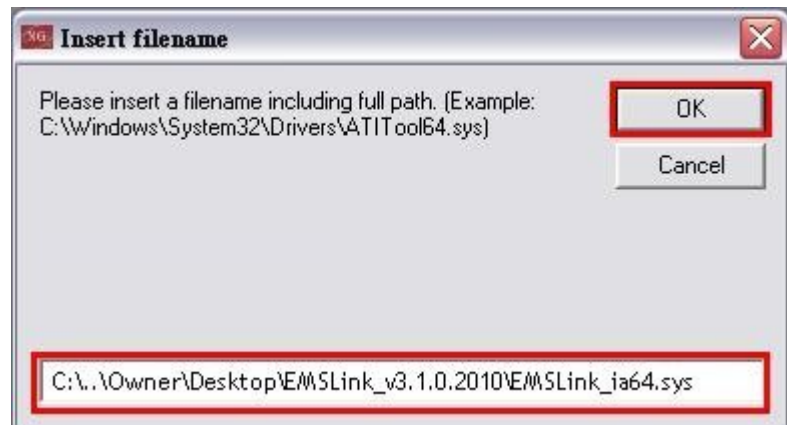
Next

7. Enter the location of the file "EMSLink_amd64.sys", and click "OK".

Insert filename

Please insert a filename including full path. (Example: C:\Windows\System32\Drivers\ATITool64.sys)

OK

Cancel

C:\..\Owner\Desktop\EMSLink_v3.1.0.2010\EMSLink_amd64.sys

8. Select "Sign a System File", and click "Next".

9. Enter the location of the file "EMSLink_ia64.sys", and click "OK".

10. Select "Exit" and click "Next" to exit the program.

11. Reboot your PC.

12. Plug the EMS product to PC, and install the driver as usual.
(i.e. direct the installer to the location of EMSLink_ia64.sys and EMSLink_amd64.sys)